

Frog Light Information Sheet

IMPORTANT

Please charge your Frog Light for **24 Hours** when delivered. This will prolong the life of the battery.

The Frog Light casing **DOES NOT NEED** to be opened for re charging. Attach the pink clip securely to the charging points. Only charge with a **Croker Oars** charger.

Charging Notes

- » A **Red LED** will indicate when charging is required. The light will continue to work in this state for a short period of time, however the light must be charged as soon as possible to ensure that it continues to work as intended.
- » When charging, a **Green LED** will illuminate when being charged correctly. This light does not indicate when charging is complete.
- » From low battery (**Red LED**), lights will require a full 30 hour charge cycle to return to full capacity.

Batteries

The Frog Light is supplied with re chargeable batteries. In order to ensure that your Frog Light continues to work for season after season, you must ensure that your batteries are maintained correctly. **NEVER ALLOW YOUR LIGHTS TO RUN COMPLETELY FLAT**, as it is likely that the batteries will not recover. Frog Lights **MUST** be stored upside down and should never be left without charging for a period of greater than three months.

Fast Facts about your Frog Light

- » Re-chargeable.
- » Will flash continuously for a minimum of 24 hours before requiring recharging. Also available in solid white lights.
- » Will turn ON and OFF when natural light levels determine it is necessary.
- » Will turn OFF when turned upside down (i.e. when your boat is off the water and on the rack, it will not flash).
- » Red LED indicates that the unit requires charging as soon as possible.
- » Green LED indicates when you have correctly attached the charging unit and therefore the unit is charging.

Maintenance Requirements

- » Lights will be almost maintenance free as long as they are treated with relative care.
- » Velcro should be kept clean and free from foreign objects to ensure that a good bond is made each time.
- » When required, wipe over the lights with a damp cloth to remove excessive build up of salt or dirt particles.
- » Should you notice any evidence of moisture inside of the unit, you must return it to **Croker Oars** as soon as possible.

Dropping

The Frog Light has been designed to withstand use on rowing boats. The Frog Light is not indestructible and should not be dropped. If you drop your Frog Light it must be checked for damage to the housing to ensure that it still operates correctly, prior to it being used again. If the light shows any signs of damage, you should check that it is not leaking.


**BE SAFE
BE SEEN**



The Frog Light has been developed specially for rowing. Twelve LEDs lights form a 250° array of light. It is therefore necessary to fit one Frog Light at each end of your boat(s) in order to comply with maritime requirements.

Fitting Frog Lights to Rowing Boats

- » Your Frog Light has been supplied with sufficient Velcro to attach to your boat.
- » Light should be fitted at a point on either bow or stern canvas where light does not effect the rowers vision, whilst illuminating as much of the boat as possible.
- » The canvas 'shape' in each boat class, each boat mould and each boat manufacturer will vary and therefore the most practical location to meet the above guidelines must be determined before fitment.

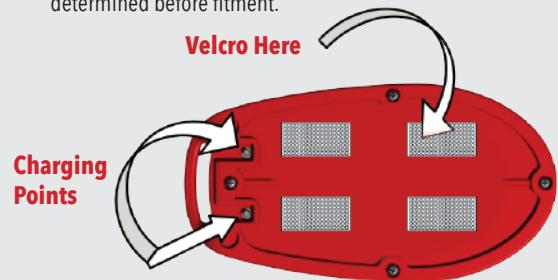

Environment

The Frog Light has been manufactured specifically for the boating environment. The Frog Light has been tested for leaks prior to delivery, however the Frog light cannot be submerged in water and is not warrantied against water damage. Therefore, please ensure that you regularly check your lights for internal moisture and should you find any evidence of water inside your Frog Light, you must return it to **Croker Oars** without delay.

Limited 1 Year Warranty

The Frog Light has a limited warranty of one year. It does not cover wear and tear or damage to the Frog Light. We warrant the Frog Light to be free of defects in materials and workmanship for the product's applicable warranty. Croker Oars will repair or replace any defective product or part when notified within the warranty period and will return. Warranties are measured from the date of purchase by the first consumer end user. Please contact Croker Oars for more information.